MFI CIRCUIT (1995 MODELS)

<TURBO>

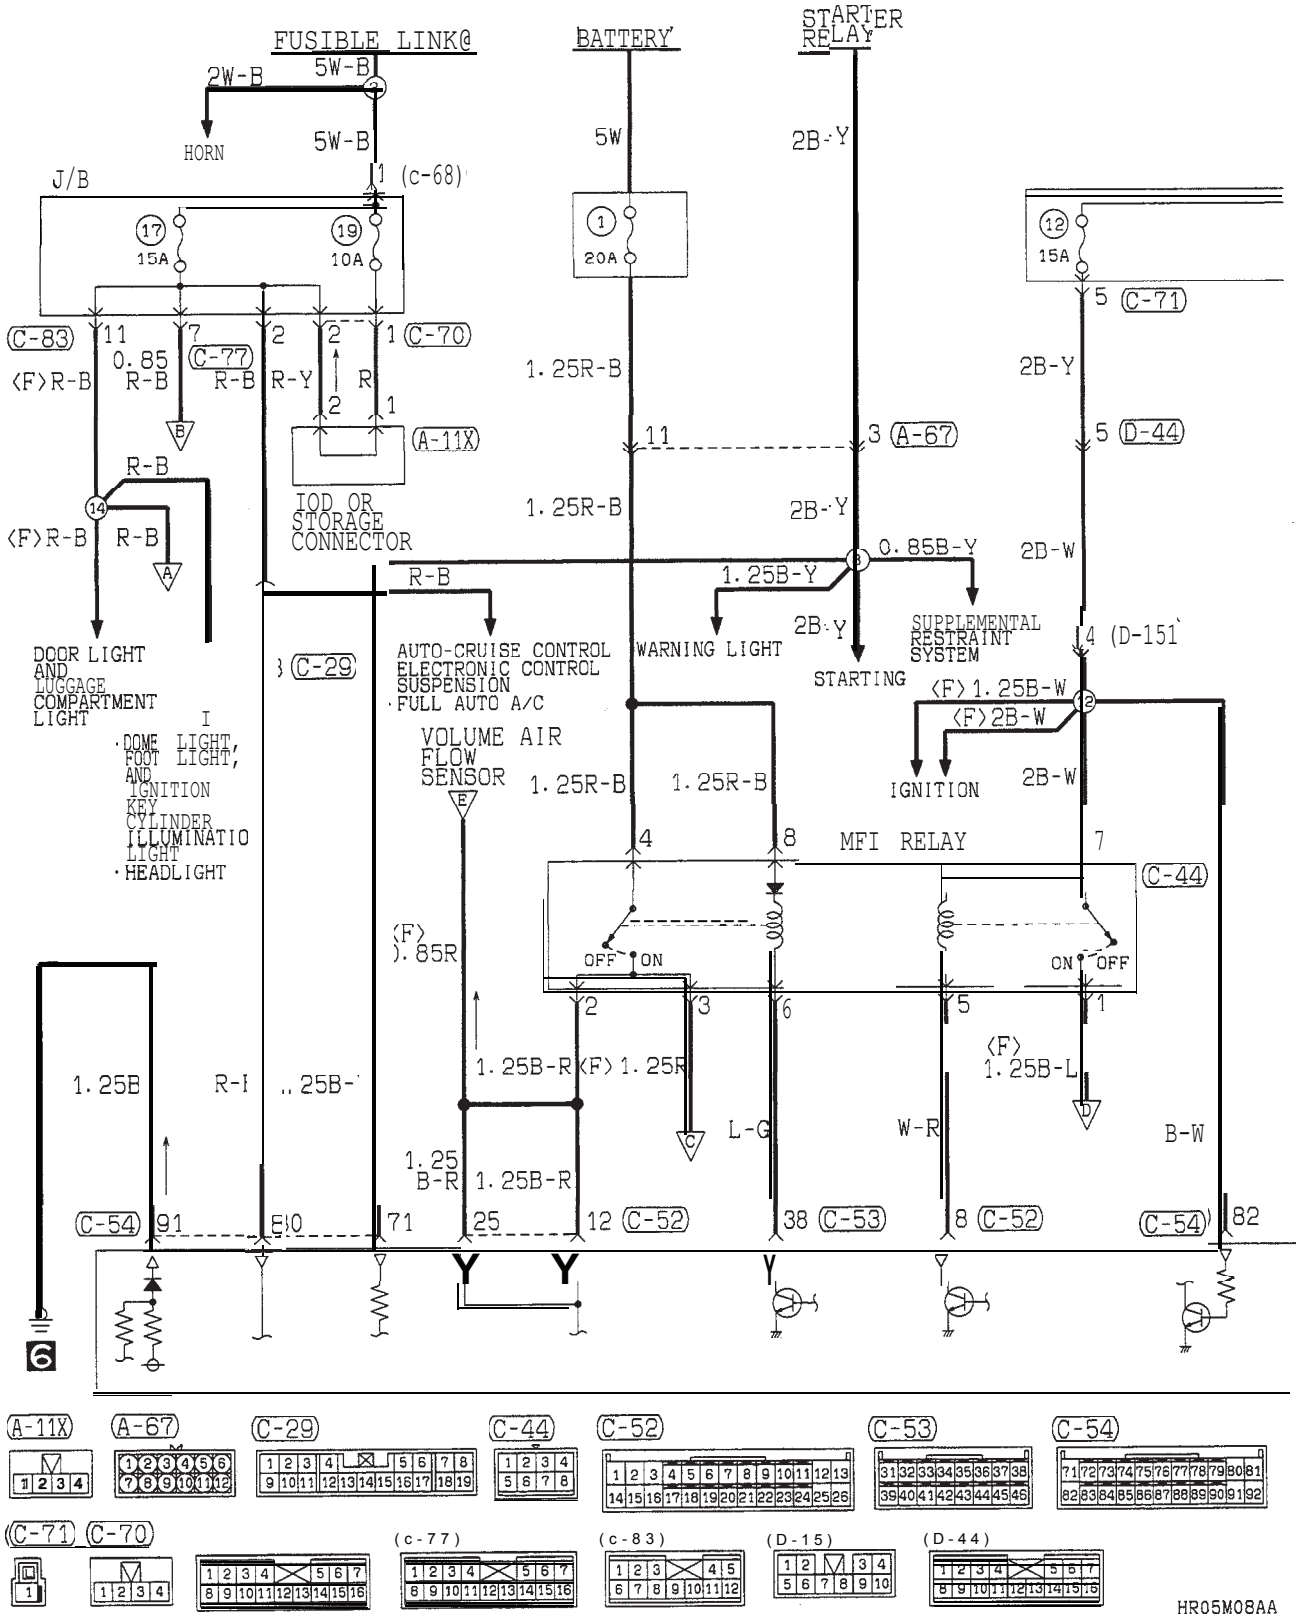

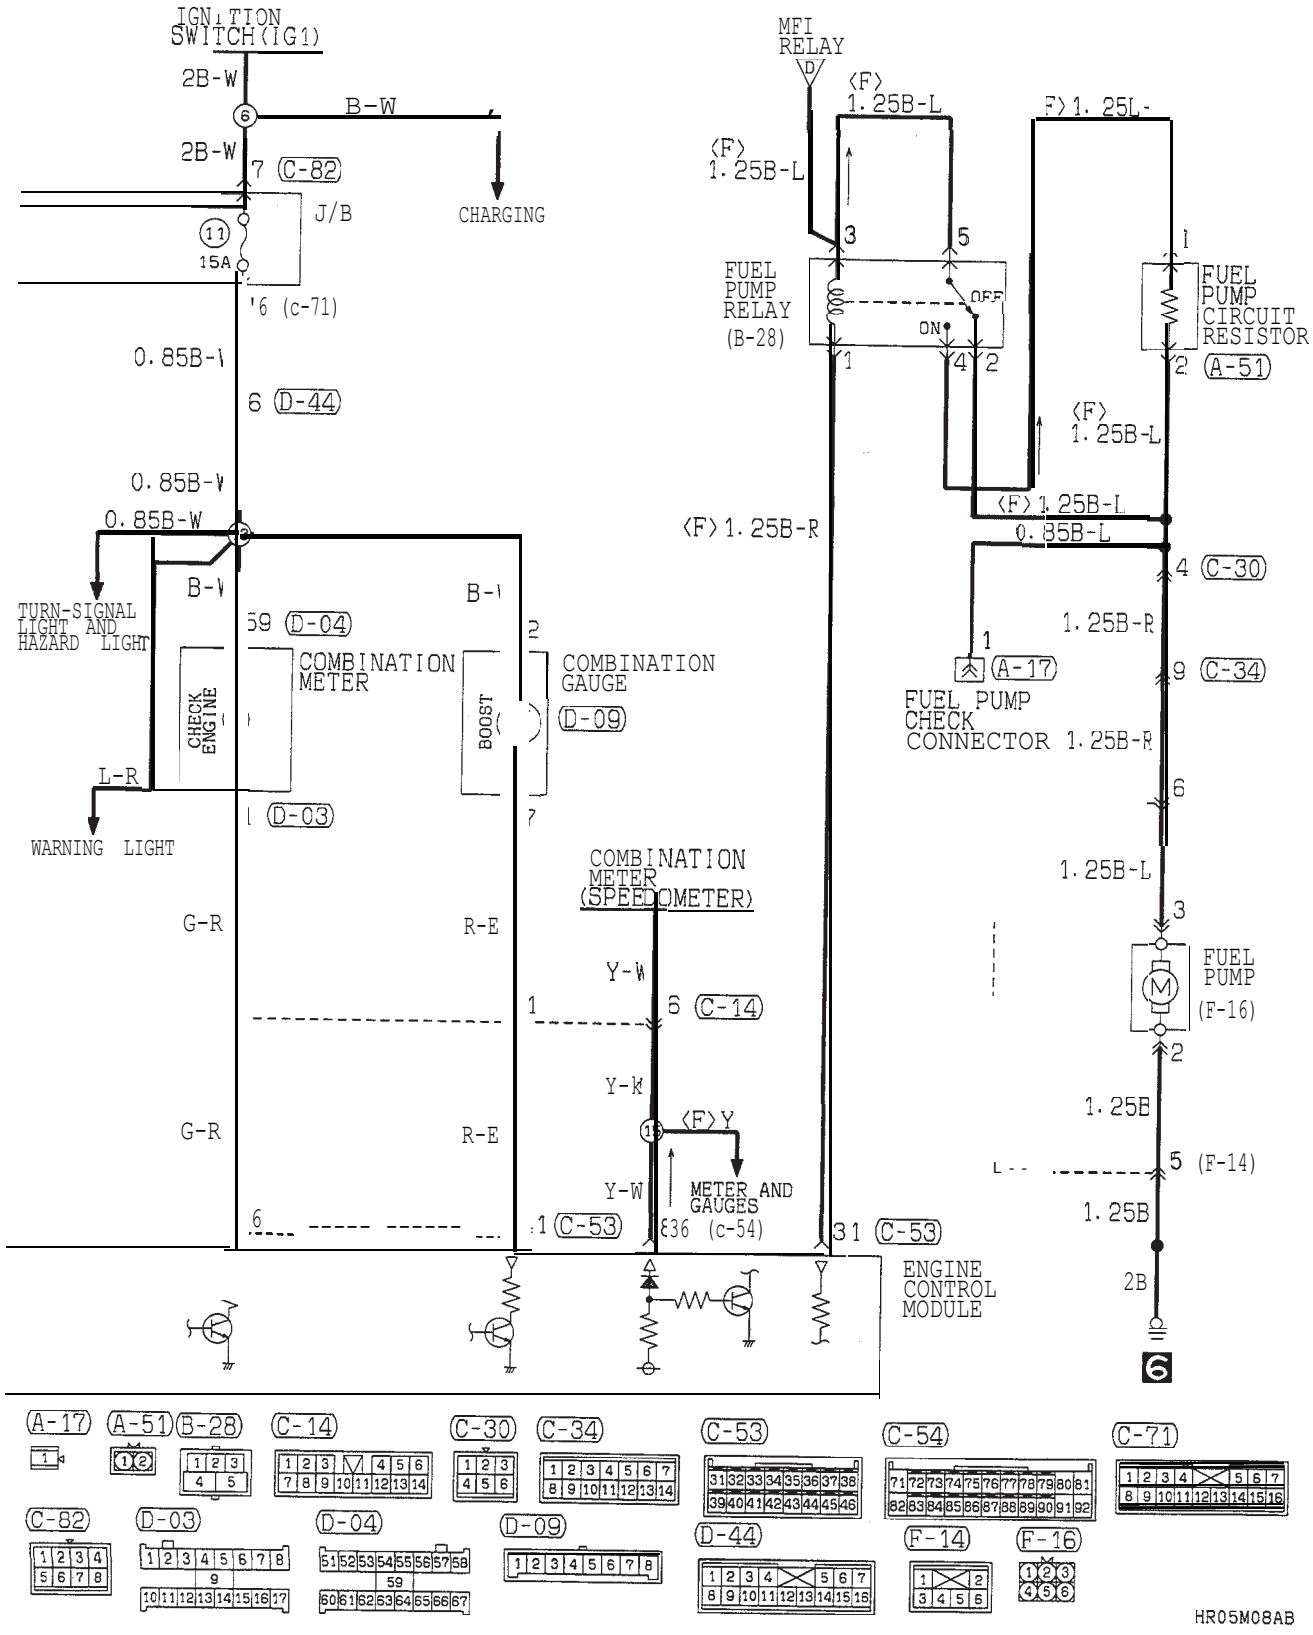
IGNITION SWITCH (IG1)
2B-W
B-W
CHARGING
J/B
15A
(C-82)
(c-71)
0.85B-W
(D-44)
TURN-SIGNAL LIGHT AND HAZARD LIGHT
(D-04)
COMBINATION METER
CHECK ENGINE
BOOST
COMBINATION GAUGE
(D-09)
L-R
WARNING LIGHT
(D-03)
G-R
R-E
COMBINATION METER (SPEEDOMETER)
Y-W
(C-14)
Y-R
(F)Y
METER AND GAUGES
(C-53)
(c-54)
ENGINE CONTROL MODULE
MFI RELAY
(F) 1.25B-L
FUEL PUMP RELAY
(B-28)
OFF
ON
FUEL PUMP CIRCUIT RESISTOR
(A-51)
(F)1.25B-R
0.85B-L
(C-30)
1.25B-R
(A-17)
(C-34)
FUEL PUMP CHECK CONNECTOR
1.25B-L
FUEL PUMP
(F-16)
1.25B
(F-14)
2B
6
(A-17)
(A-51)
(B-28)
(C-14)
(C-30)
(C-34)
(C-53)
(C-54)
(C-71)
(C-82)
(D-03)
(D-04)
(D-09)
(D-44)
(F-14)
(F-16)
HR05M08AB

MFI CIRCUIT (1995 MODELS) <TURBO> (CONTINUED)

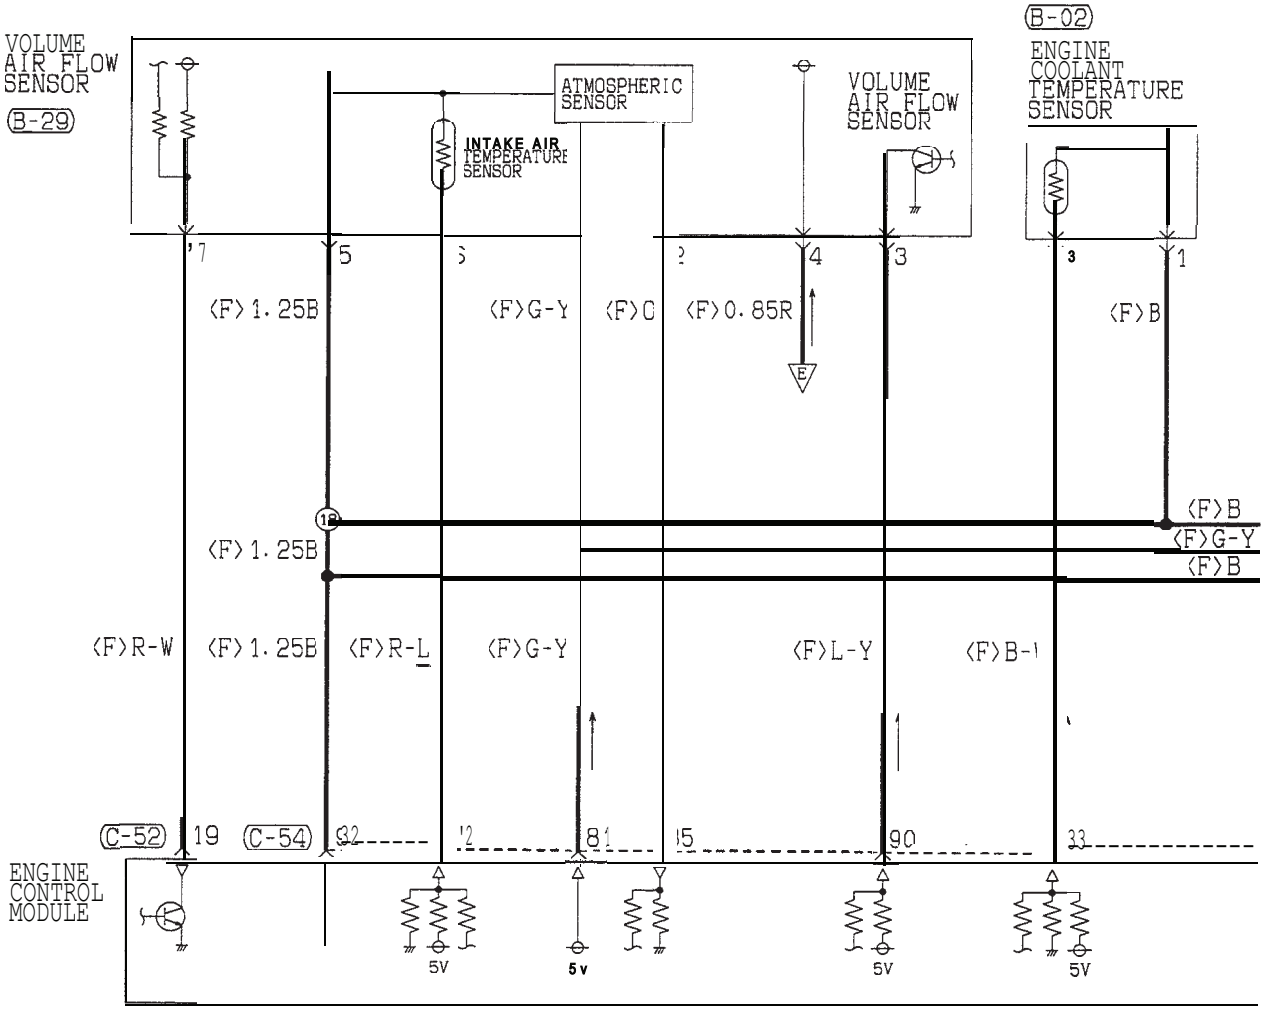



HR05M08BA

TSB Revision

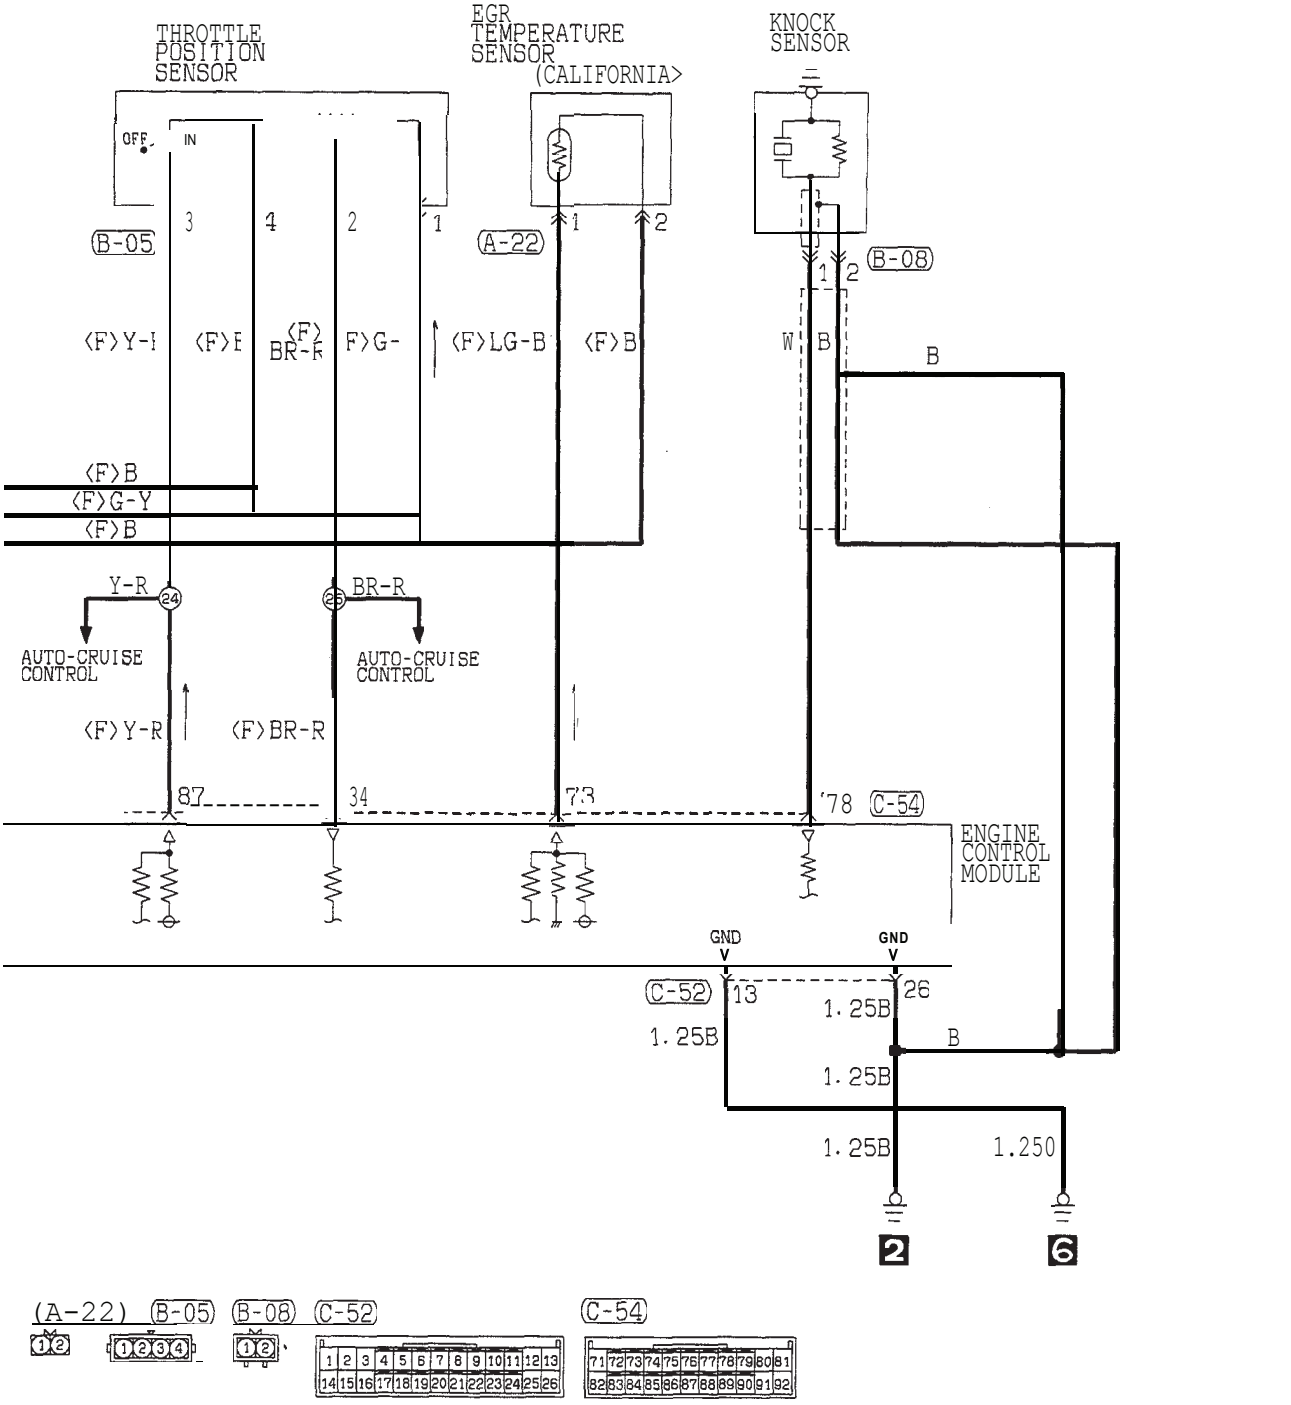
THROTTLE POSITION SENSOR
EGR TEMPERATURE SENSOR (CALIFORNIA>
KNOCK SENSOR
OFF
IN
B-05
A-22
B-08
3
4
2
1
1
2
1
2
<F>Y-R
<F>B
<F>BR-R
<F>G-
<F>LG-B
<F>B
W
B
B
<F>B
<F>G-Y
<F>B
Y-R
BR-R
AUTO-CRUISE CONTROL
AUTO-CRUISE CONTROL
<F>Y-R
<F>BR-R
87
34
73
78
C-54
ENGINE CONTROL MODULE
GND
GND
C-52
13
26
1.25B
1.25B
B
1.25B
1.25B
1.250
2
6
(A-22)
B-05
B-08
C-52
C-54

HR05M08BB

MFI CIRCUIT (1995 MODELS) <TURBO> (CONTINUED)

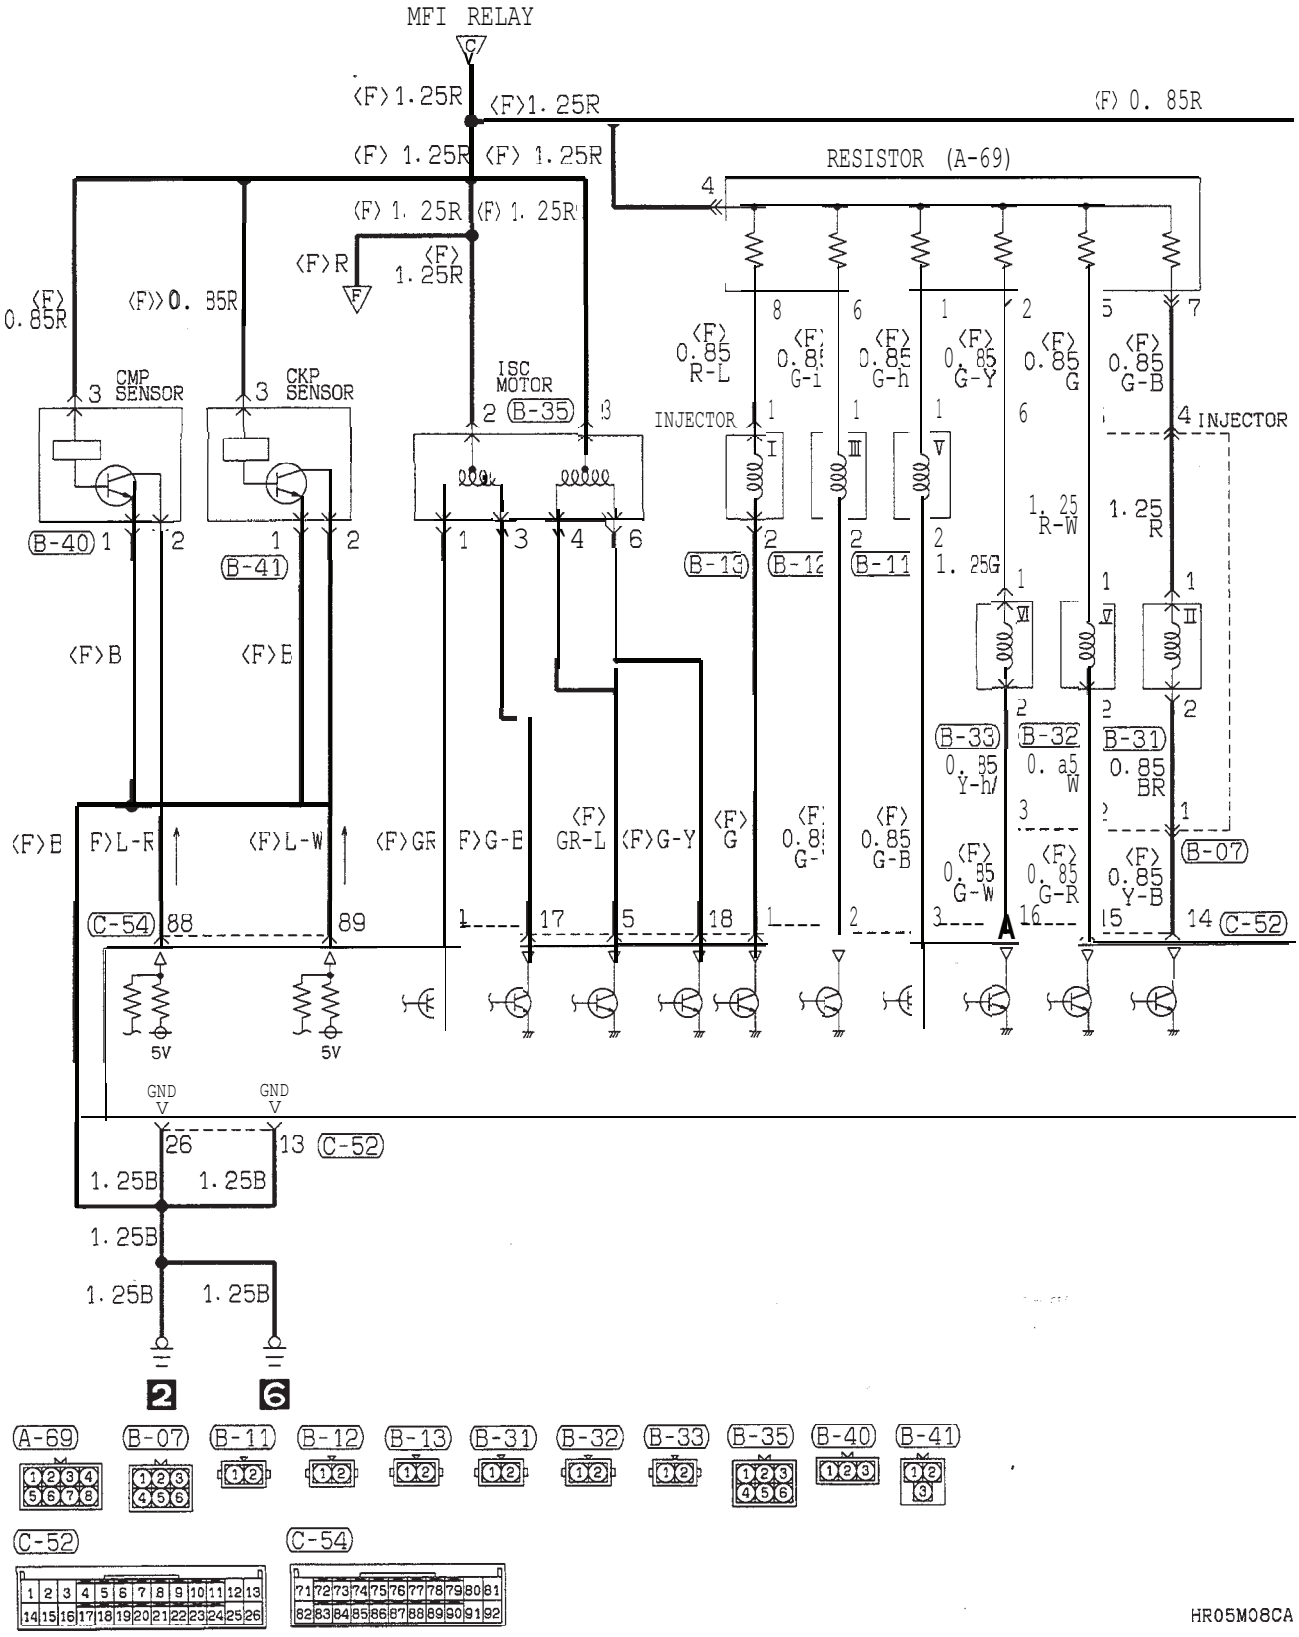

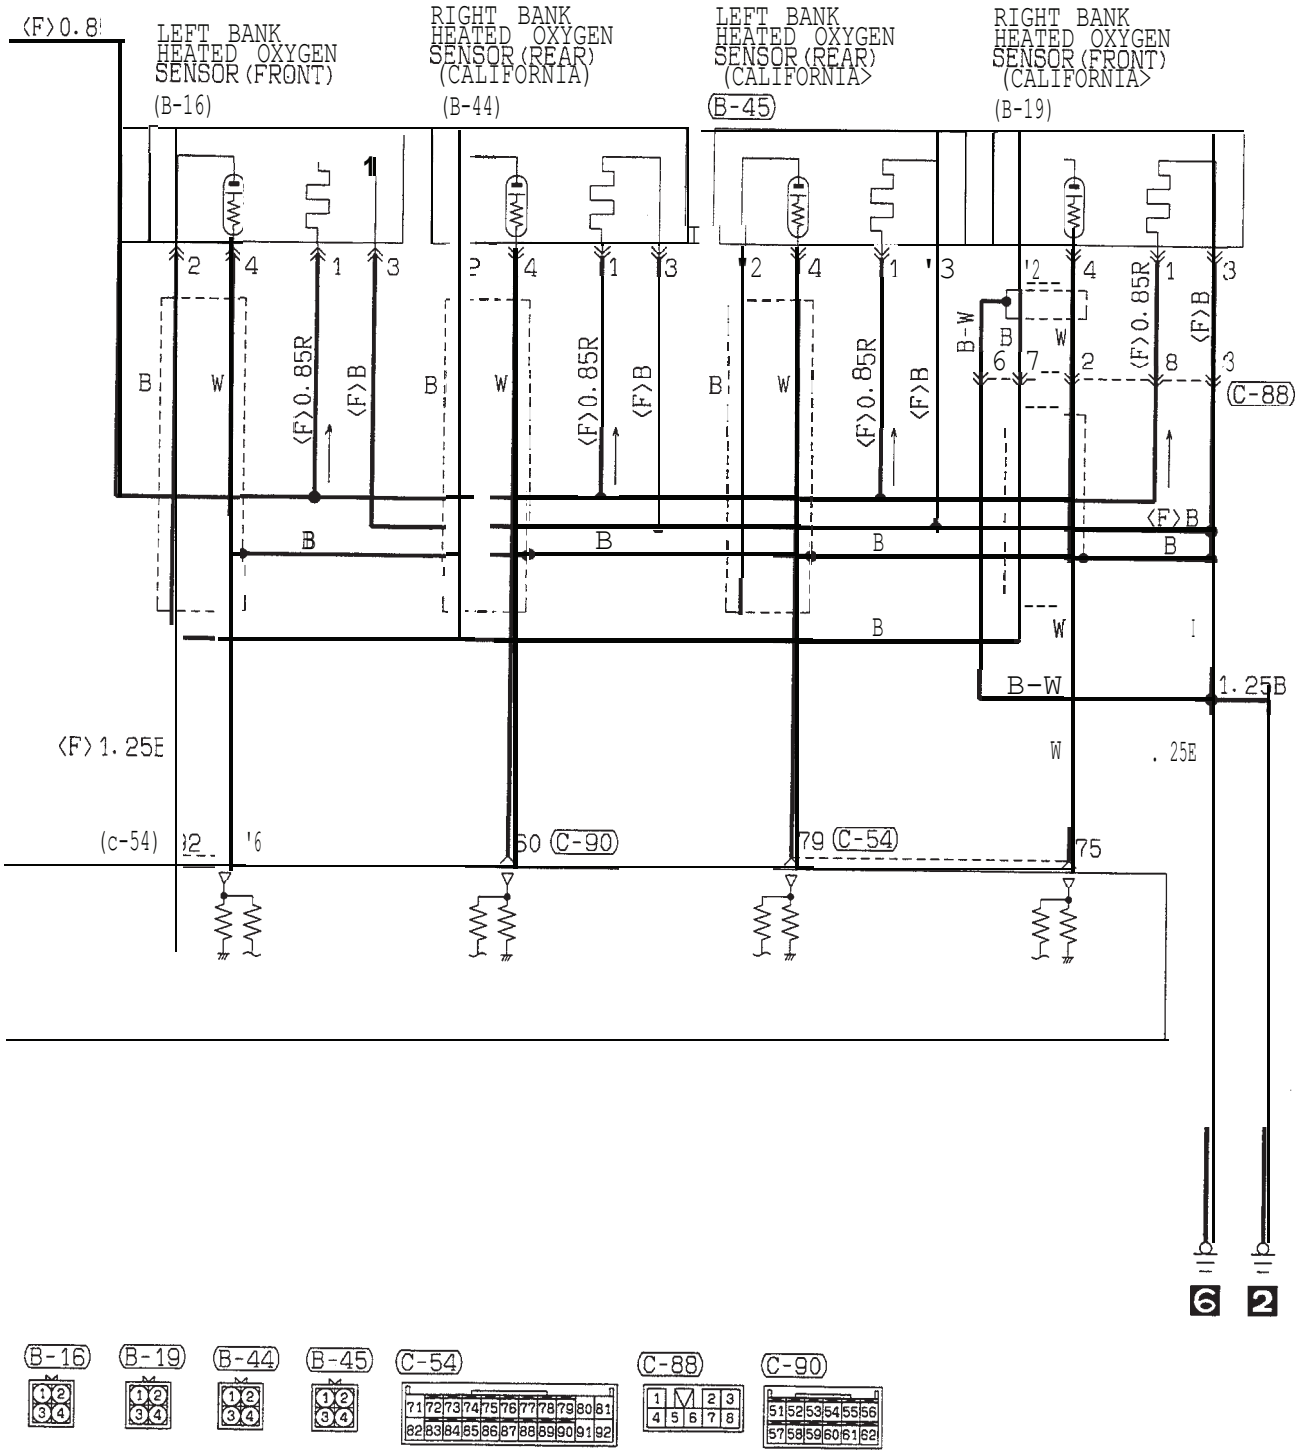
LEFT BANK HEATED OXYGEN SENSOR (FRONT)
(B-16)
RIGHT BANK HEATED OXYGEN SENSOR (REAR) (CALIFORNIA)
(B-44)
LEFT BANK HEATED OXYGEN SENSOR (REAR) (CALIFORNIA)
(B-45)
RIGHT BANK HEATED OXYGEN SENSOR (FRONT) (CALIFORNIA)
(B-19)
(C-88)
(C-90)
(C-54)
B-W
1.25B
HR05M08CB

MFI CIRCUIT (1995 MODELS) <TURBO> (CONTINUED)

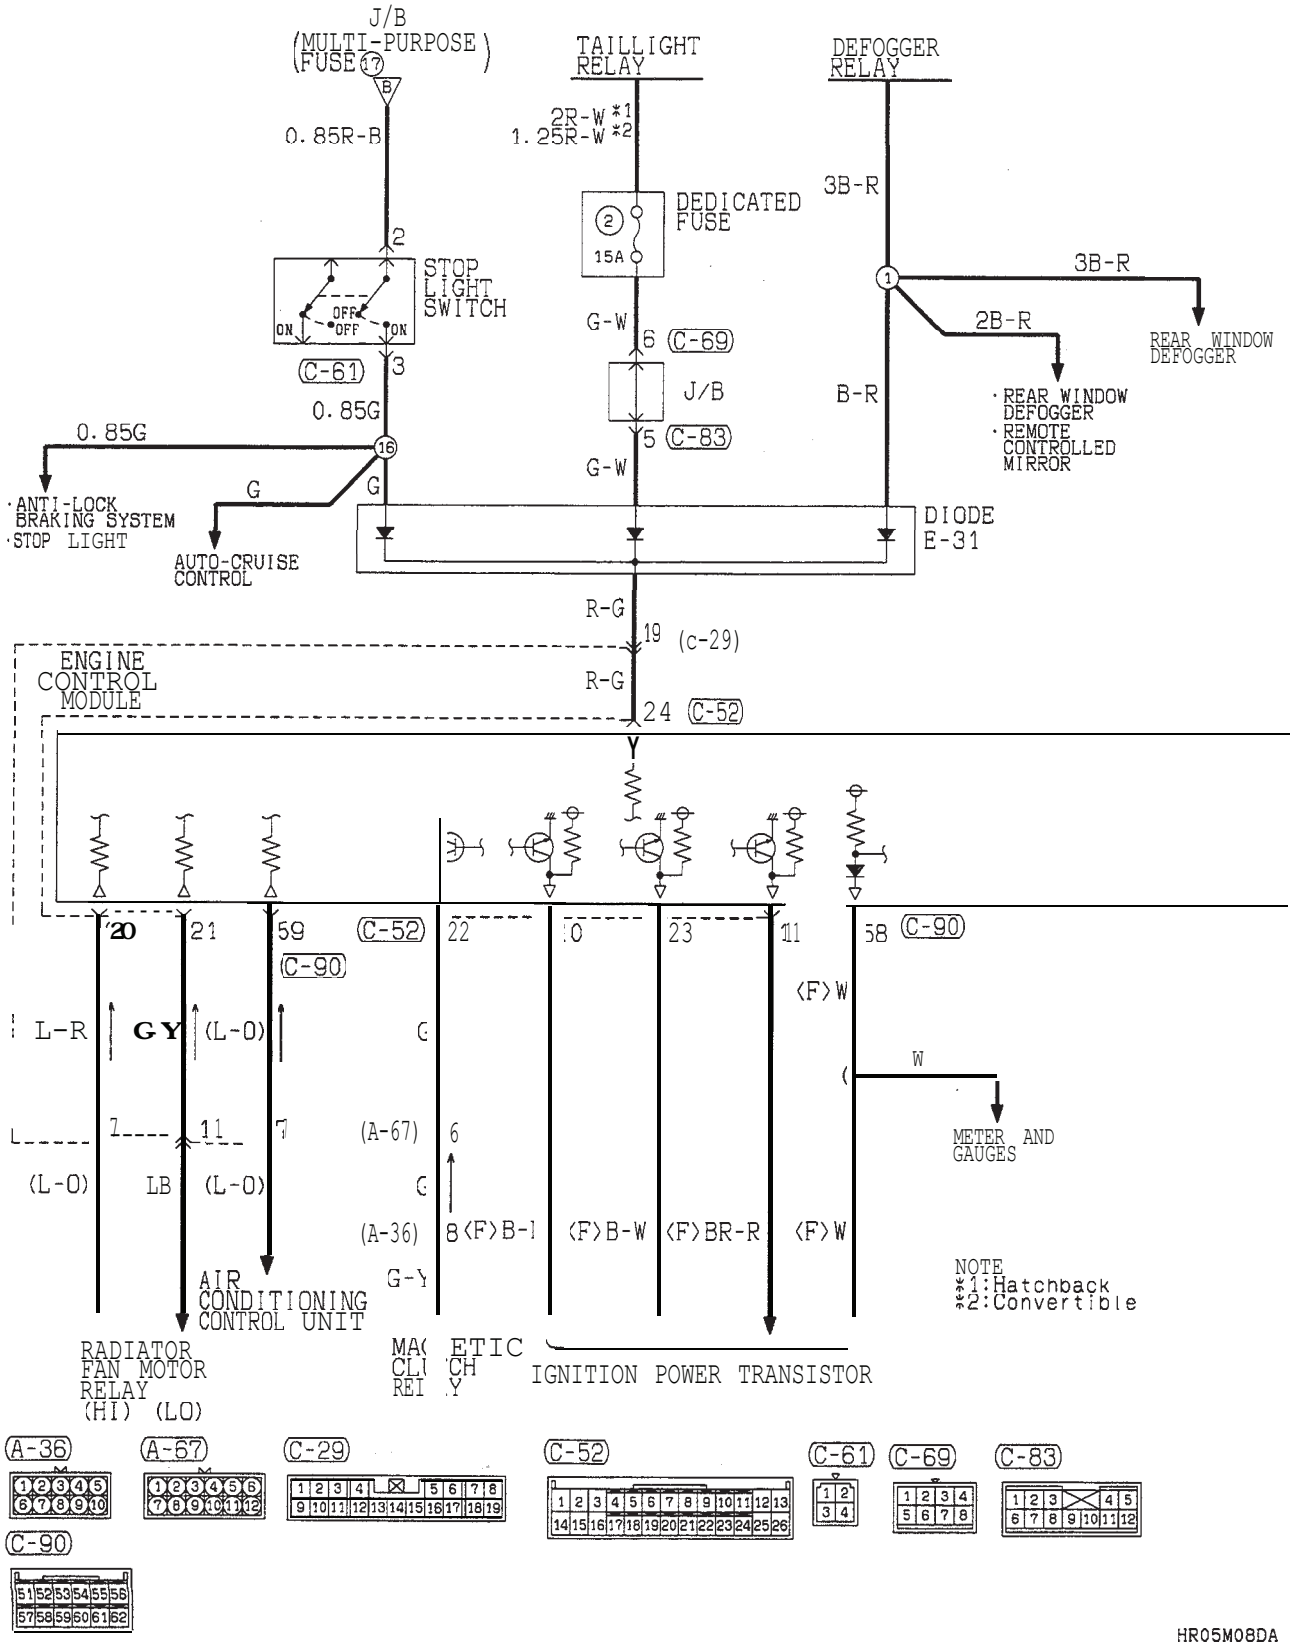

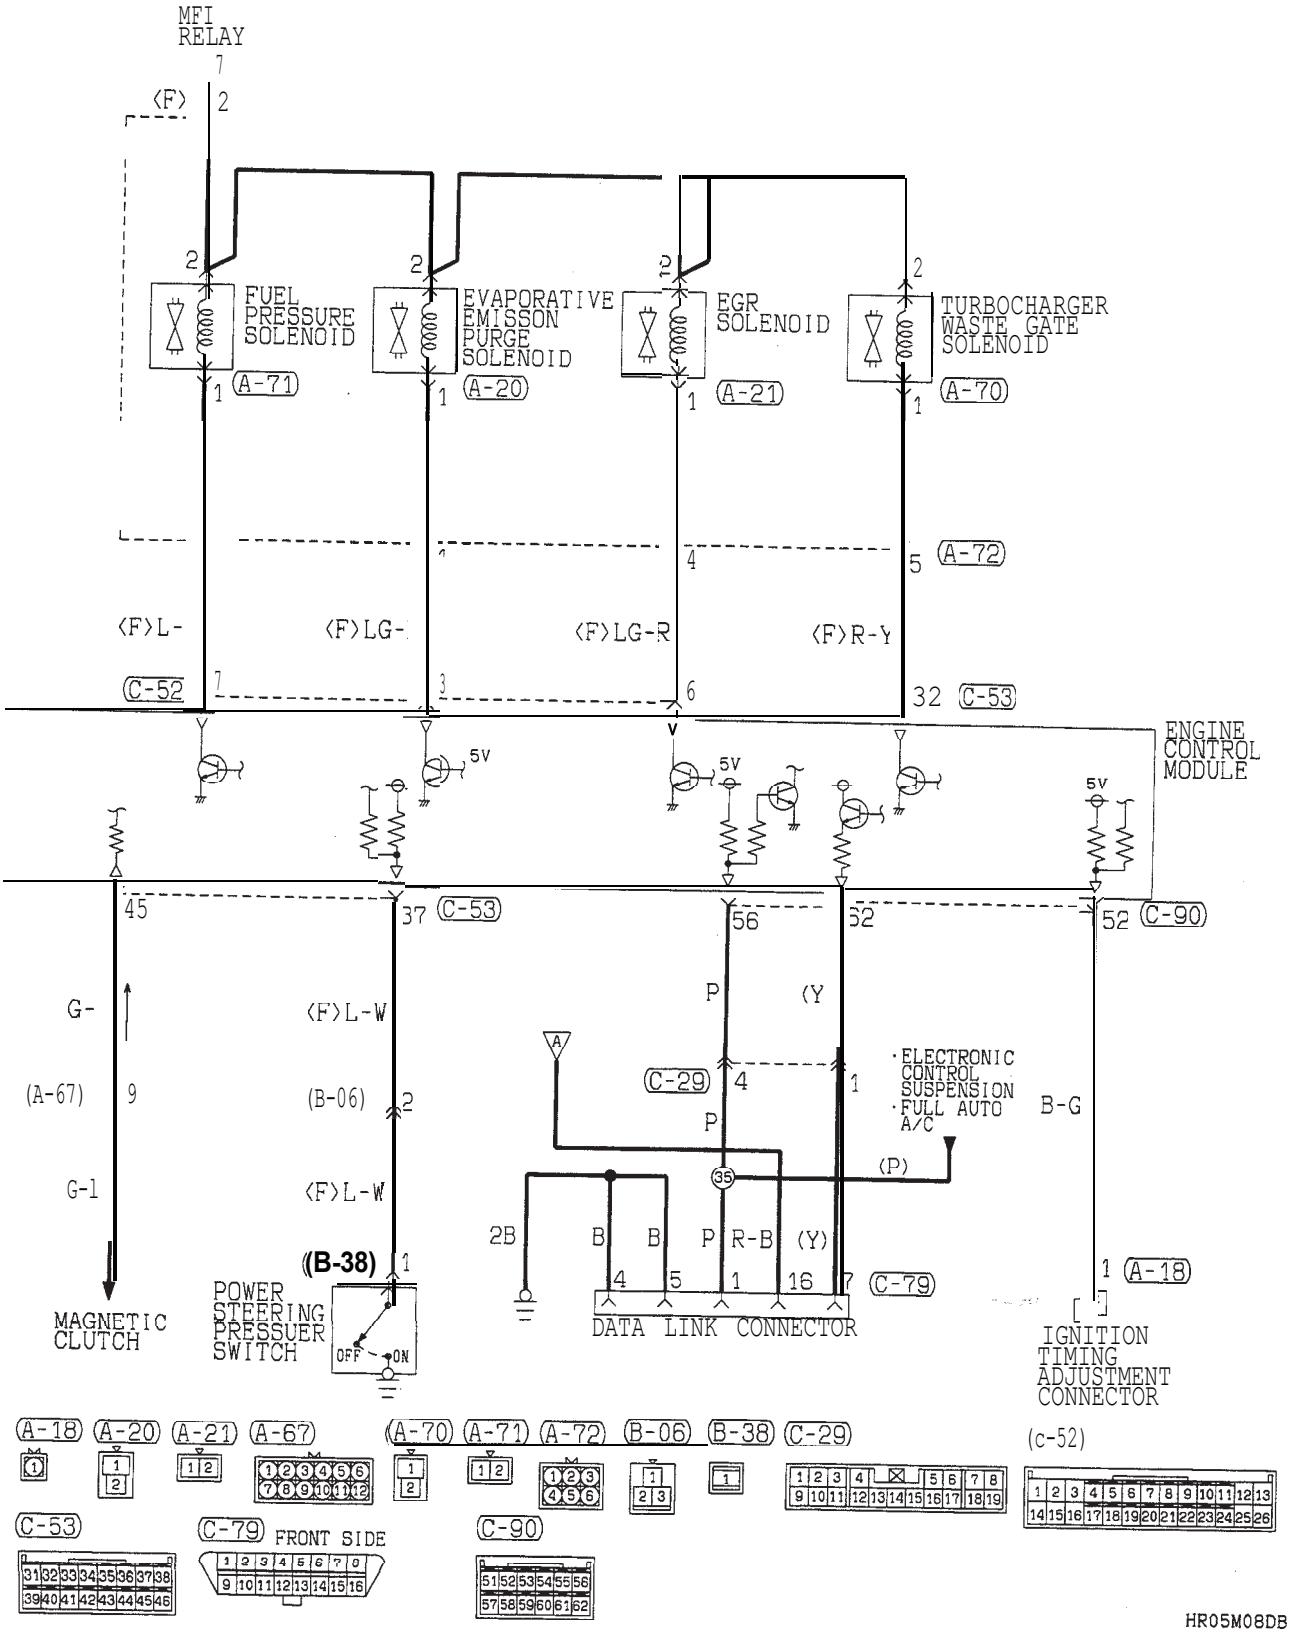
MFI RELAY
FUEL PRESSURE SOLENOID
EVAPORATIVE EMISSION PURGE SOLENOID
EGR SOLENOID
TURBOCHARGER WASTE GATE SOLENOID
A-71
A-20
A-21
A-70
A-72
C-52
C-53
ENGINE CONTROL MODULE
C-90
C-29
C-79
A-18
(B-38)
MAGNETIC CLUTCH
POWER STEERING PRESSUER SWITCH
OFF
ON
DATA LINK CONNECTOR
ELECTRONIC CONTROL SUSPENSION
FULL AUTO A/C
IGNITION TIMING ADJUSTMENT CONNECTOR
FRONT SIDE
HR05M08DB